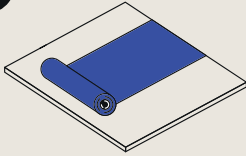
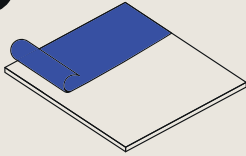
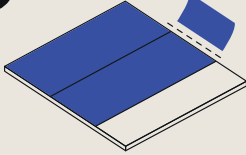
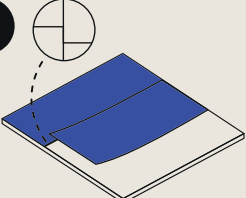
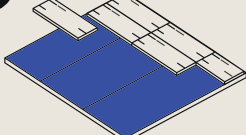


<p>1</p> 	<p>1. Unroll the <b>floorMuffler® Flex</b> onto the floor and allow it to relax for 2 hours. Shaking the material will help it to relax.</p>
<p>2</p> 	<p>1. Starting in the corner of the room, lay down the <b>floorMuffler® Flex</b> so that it is perpendicular to the direction the flooring will be installed.</p>
<p>3</p> 	<p>1. <b>Trim the material</b> to fit the surface area to be covered.</p>
<p>4</p> 	<p>1. <b>Align the second cut of material</b> with the edge of the neighboring section so that the edges of the two sections touch but do not overlap.</p> <p>2. <b>Use duct tape or carpet tape</b> to hold the seams of the underlayment together.</p> <p>3. Continue to lay down the material in this manner until the surface area is covered.</p>
<p>5</p> 	<p>1. <b>Install the flooring</b> per manufacturer's instructions.</p>

For glue down installations, always follow the adhesive manufacturer's instructions. Make sure to use a floorMuffler approved adhesive. The list of approved adhesives can be found on each product page on the floorMuffler website.