


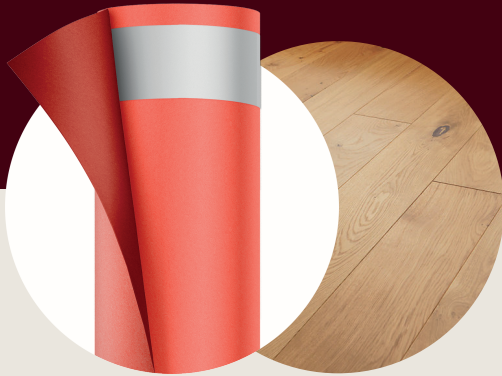

FLOOR MUFFLER® ULTRASEAL

The adhesives below have been tested and approved by the respective manufacturer for installation of floorMuffler underlayments. Diversified Industries has not independently verified this information. Contact the adhesive manufacturer directly to obtain their installation instructions and warranty information prior to use.

FOR ADHERING THE FLOORMUFFLER TO THE WOOD FLOORING

DRITAC	BOSTIK
7700 Easy Clean 4n1	GreenForce
7400 Easy Spread	Bostik's Best
7300 Sure Bond	Pro-MSP
7800 Supreme Green	Pro-Cure
	EFA+
MAPEI	STAUF USA
UltraBond Eco 962	AEM-852
UltraBond Eco 373	
FRANKLIN	NORTH AMERICAN
Titebond 801	Ever Bond PSA Super
Titebond 811	
Titebond 821 - Step	
Titebond 771 - Step	
TAYLOR	
2071	

FOR ADHERING THE UNDERLAYMENT TO A WOOD OR CONCRETE SUBFLOOR

BOSTIK		MAPEI			
GreenForce		UltraBond Eco 811			
Bostik's Best		UltraBond Eco 350			
Pro-MSP		UltraBond Eco 360			
Pro-Cure		UltraBond Eco 373			
EFA+					
TAYLOR					
2071	Timberline	Equalizer Pro			
Pinnacle	Aspen	Preconnect Plus			
Dynamic	Ironwood	Ridgeline			
Resolute	Summit Select				
DRITAC		STAUF USA			
7800 Supreme Green		BCS-827			
FRANKLIN		N. AMERICAN		XL BRANDS	
TiteBond 670	Ever Bond PSA Super	Stix 2230*			
TiteBond 801	Ever Bond PSA Plus				