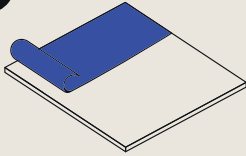
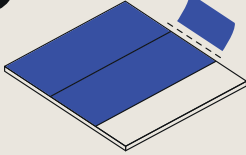
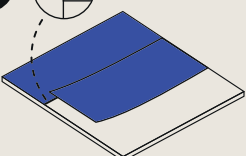
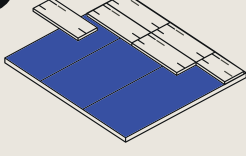
 <p>1</p>	<p>1. Unroll the floorMuffler® Flex onto the floor and allow it to relax for 2 hours. Shaking the material will help it to relax.</p>
 <p>2</p>	<p>1. Starting in the corner of the room, lay down the floorMuffler® Flex so that it is perpendicular to the direction the flooring will be installed.</p>
 <p>3</p>	<p>1. Trim the material to fit the surface area to be covered.</p>
 <p>4</p>	<p>1. Align the second cut of material with the edge of the neighboring section so that the edges of the two sections touch but do not overlap.</p> <p>2. Use duct tape or carpet tape to hold the seams of the underlayment together.</p> <p>3. Continue to lay down the material in this manner until the surface area is covered.</p>
 <p>5</p>	<p>1. Install the flooring per manufacturer's instructions.</p>