


Installation Instructions


Natura™

1

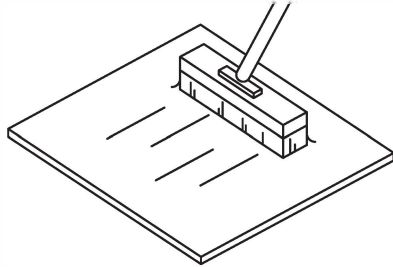


Make sure the subfloor is structurally sound, level and is free of dust and debris. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed 3lbs. per 1000 square feet per 24 hours as measured by the Anhydrous Calcium Chloride Test.

2

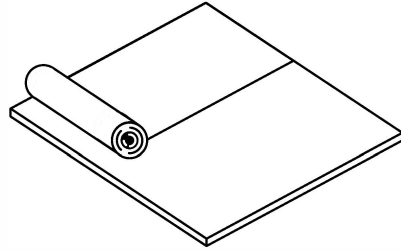


Install one roll of **Natura™** parallel to the wall and in the opposite direction as you plan to install the flooring planks, with the vapor barrier film (blue side) facing down.

3

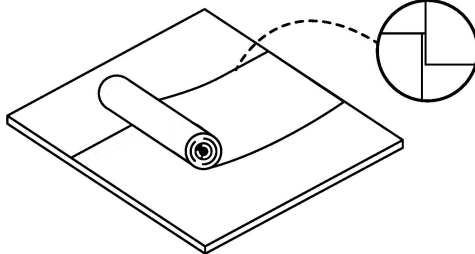


Cut the underlayment with a utility knife $\frac{1}{2}$ " to $\frac{3}{4}$ " away from the wall. Install the planks, but be sure that you are still able to see the edges of the underlayment so that you can properly line up the next roll.

4

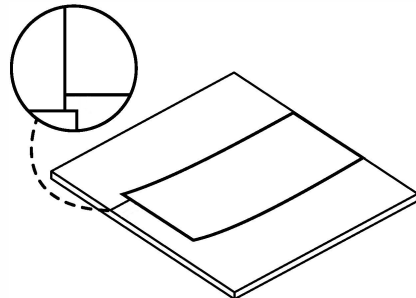

Roll Install the next roll of **Natura™**, butting the seams together. If installing over concrete, or below grade subfloors, be sure to tape the seams together using 2" tape that meets the moisture vapor transmission rate for this type of installation. If installing **Natura™** over wood or organic subfloors, the seams do not need to be taped.

5

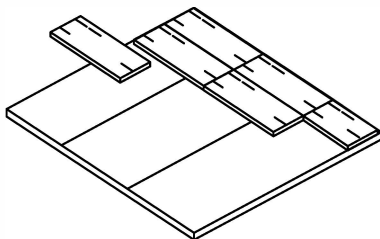

Continue installing the flooring per the flooring manufacturer's instructions.



Visit us at
floormuffler.com



FloorMuffler