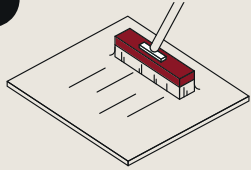
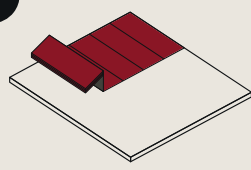
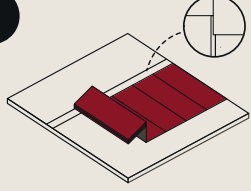
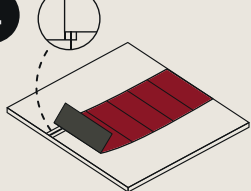
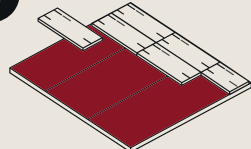


<p>1</p> 	<p>1. Make sure the subfloor is structurally sound, level and is free of dust and debris.</p> <p>2. Check for protruding nails defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed 3lbs. per 1000 square feet per 24 hours as measured by the Anhydrous Calcium Chloride Test.</p>
<p>2</p> 	<p>1. Start in a corner with the tape strip side next to the wall and the overlapping film toward the open room.</p> <p>2. Install the FloorMat™ parallel to the wall in the opposite direction that you plan to install the flooring planks.</p>
<p>3</p> 	<p>1. Unfold the next sheet of FloorMat™ in the same manner, making sure that the foam seams are butted together.</p> <p>2. Be sure to overlap only the moisture barrier lip and not the foam pad.</p>
<p>4</p> 	<p>1. Remove the adhesive liner and adhere the foam to the film overlap.</p>
<p>5</p> 	<p>1. Install the flooring per manufacturer's instructions.</p>